FJFL-V1

FTLFCT-0021

FTLFCT-6008

FTLFCT-6017


FTLFCT-6040

FTLFCT-6041

FTLFCT-6042


FTLFCT-0055

FTLFCT-0054


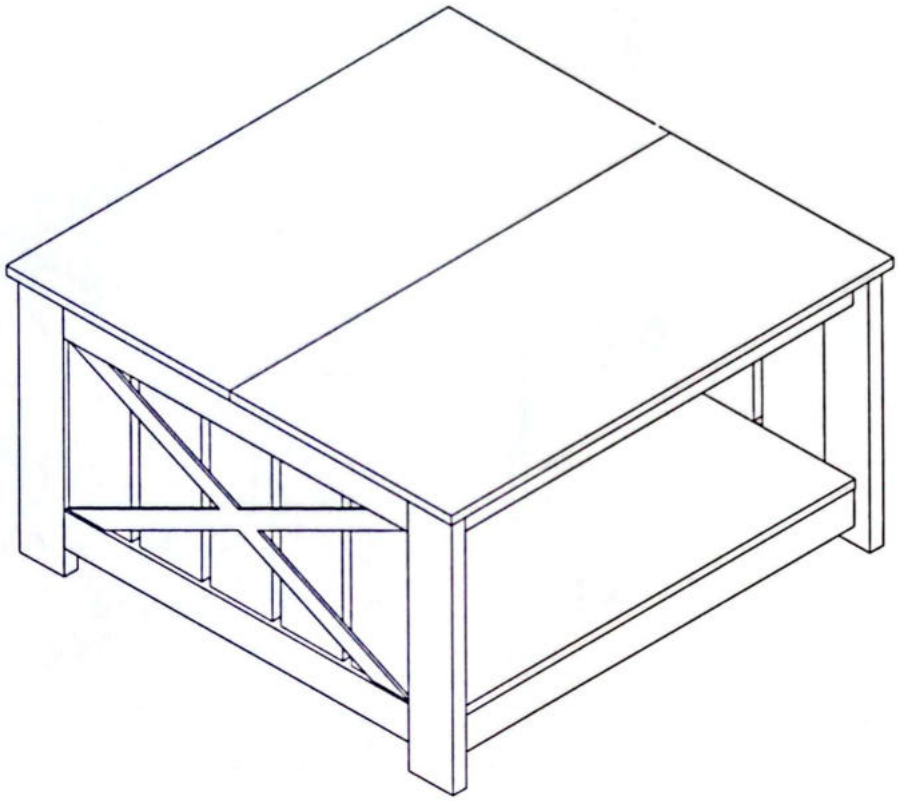





Сканировано с CamScanner

Item no.	Reference Image	Qty.
A	 M6×35	X46
B		X46
C	 M4×14	X8
D	 ∅ 8×40	X2

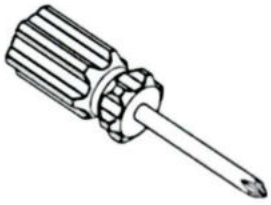
Item no.	Reference Image	Qty.
E		X2
F		X2
		X1

Сканировано с CamScanner

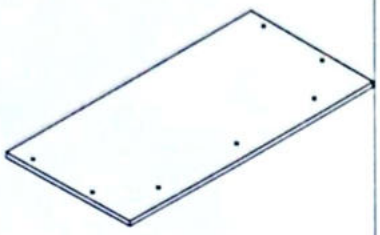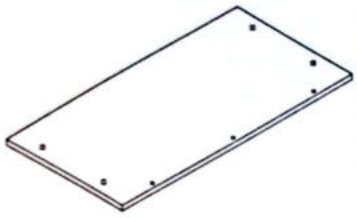Item no.	Reference Image	Qty.
1		X2
2		X2

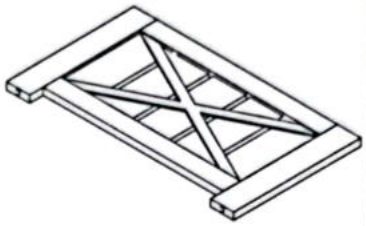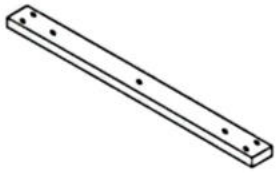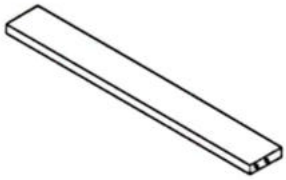
Item no.	Reference Image	Qty.
3		X2
4		X4
5		X1


Explosion Diagram

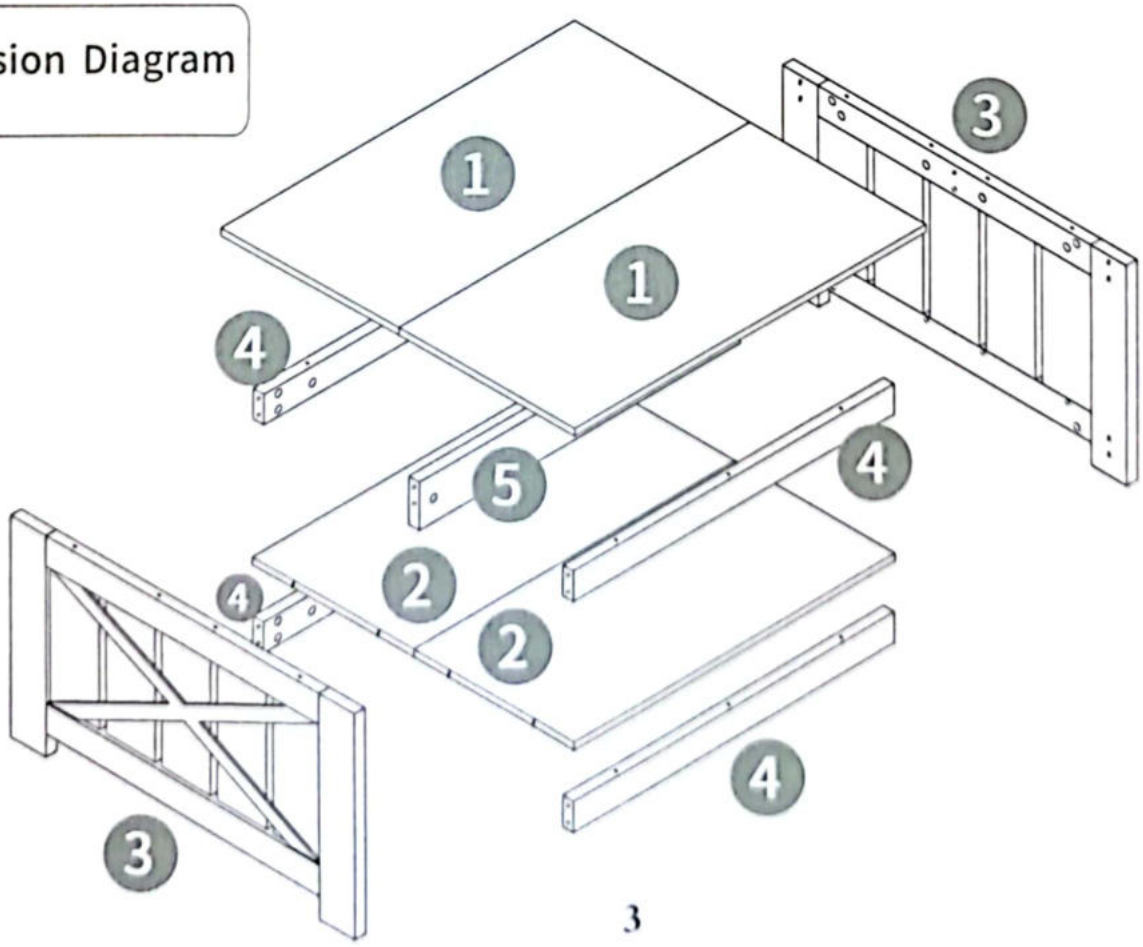


Сканировано с CamScanner

1

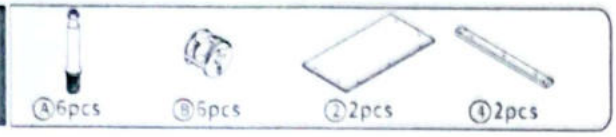


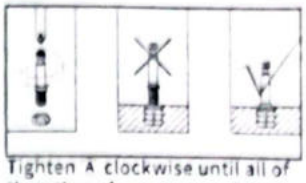


Tighten A clockwise until all of their threads are engaged.

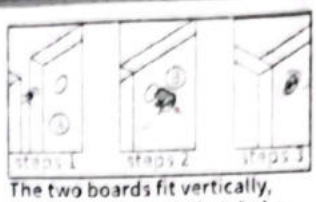


The two boards fit vertically, place B and match their holes with A then tighten B clockwise.

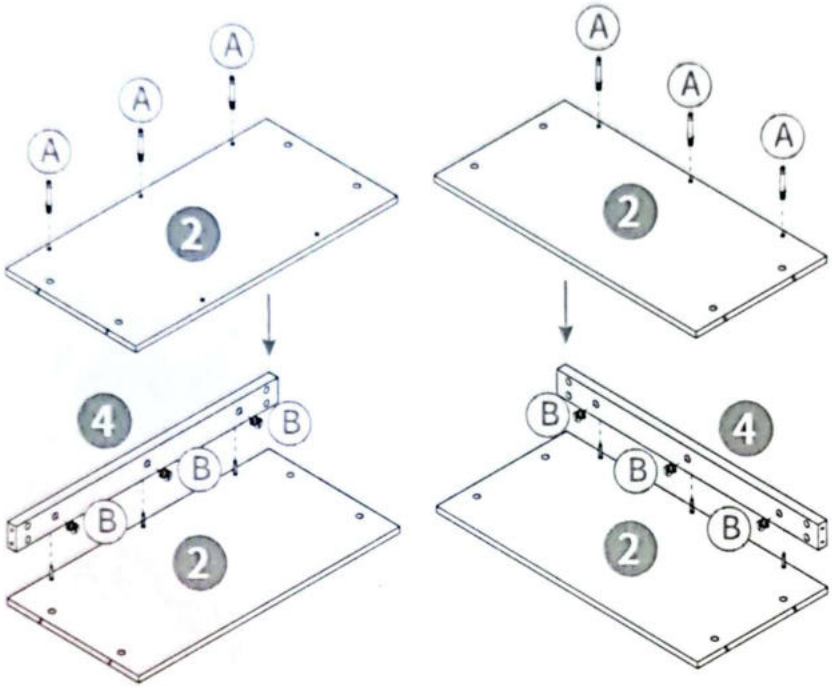

2

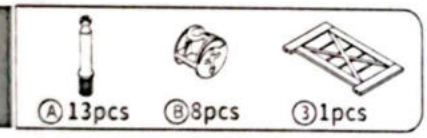


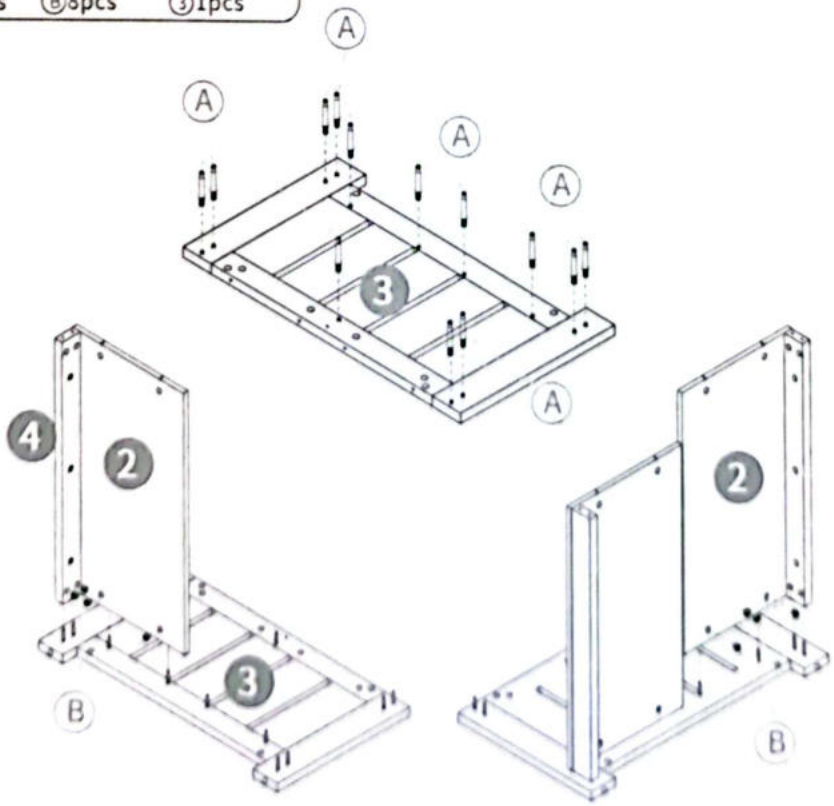


Сканировано с CamScanner

3


Ⓑ 5pcs Ⓓ 1pcs ④ 2pcs ⑤ 1pcs

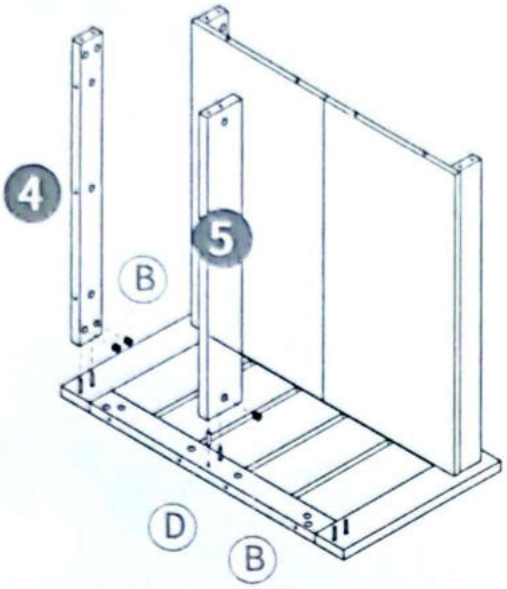


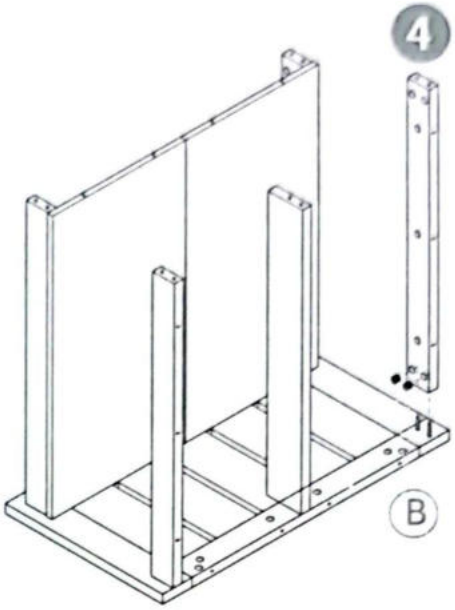


4

Ⓐ 13pcs Ⓑ 13pcs Ⓓ 1pcs ③ 1pcs

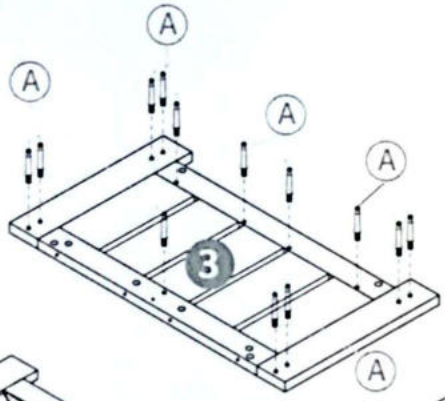


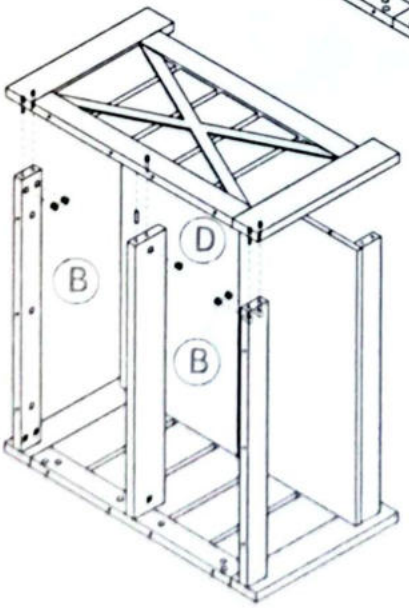


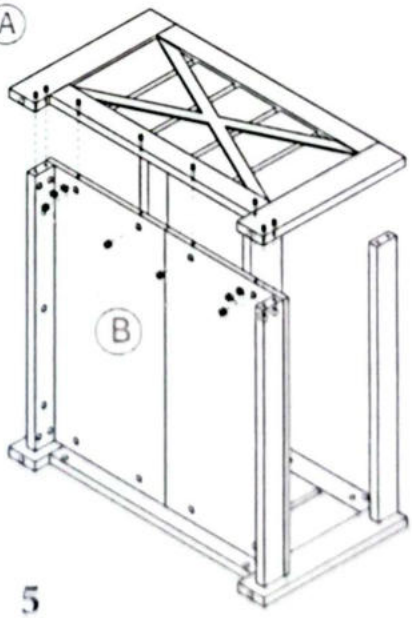


Сканировано с CamScanner


5

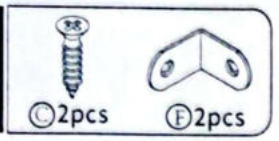


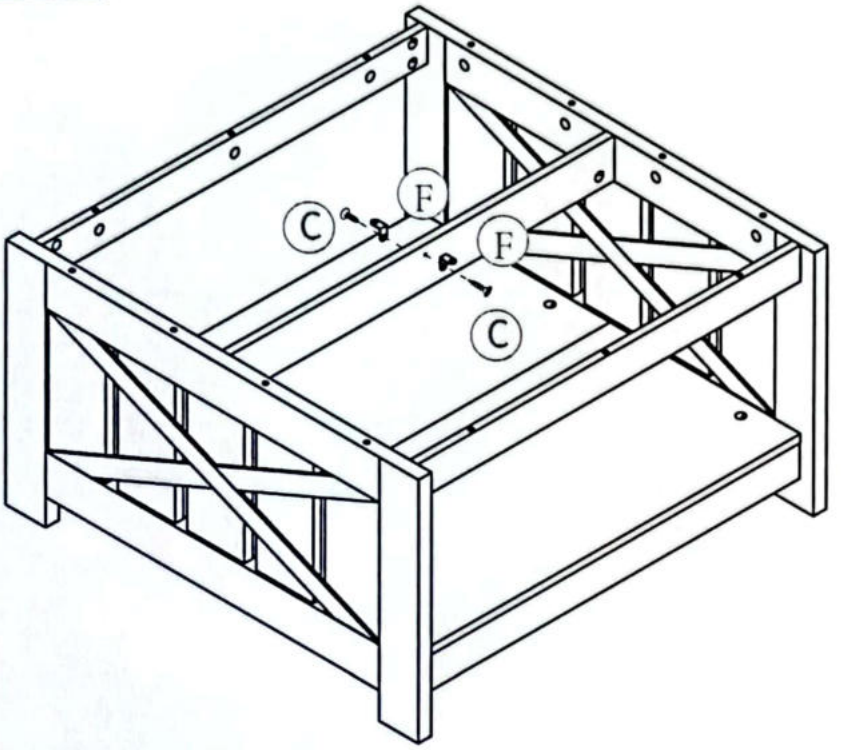

6

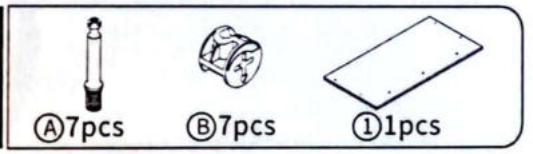


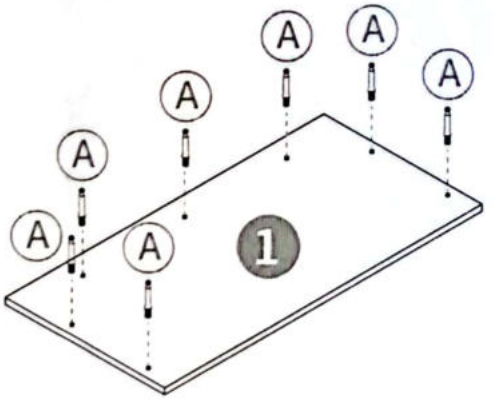


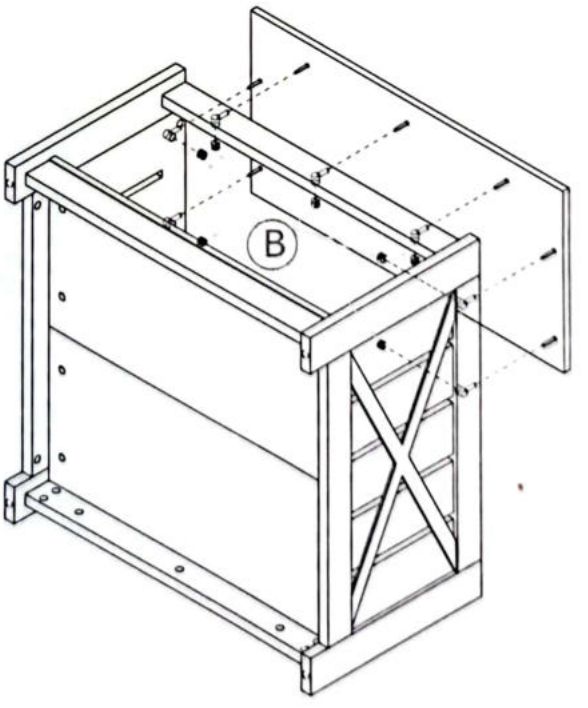


Сканировано с CamScanner


7

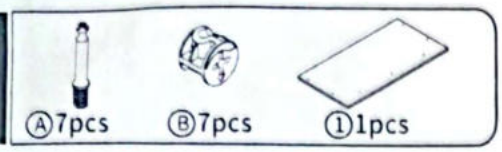


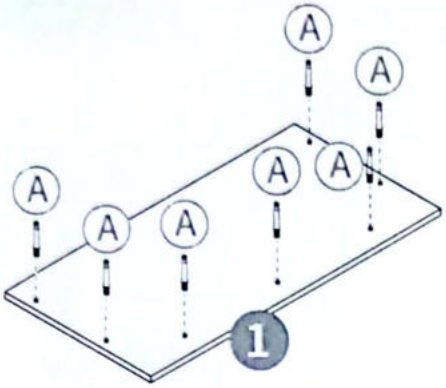

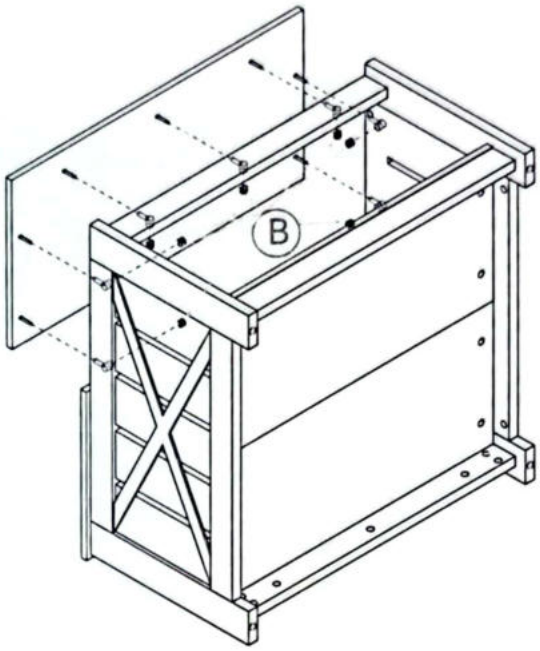


8

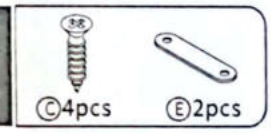


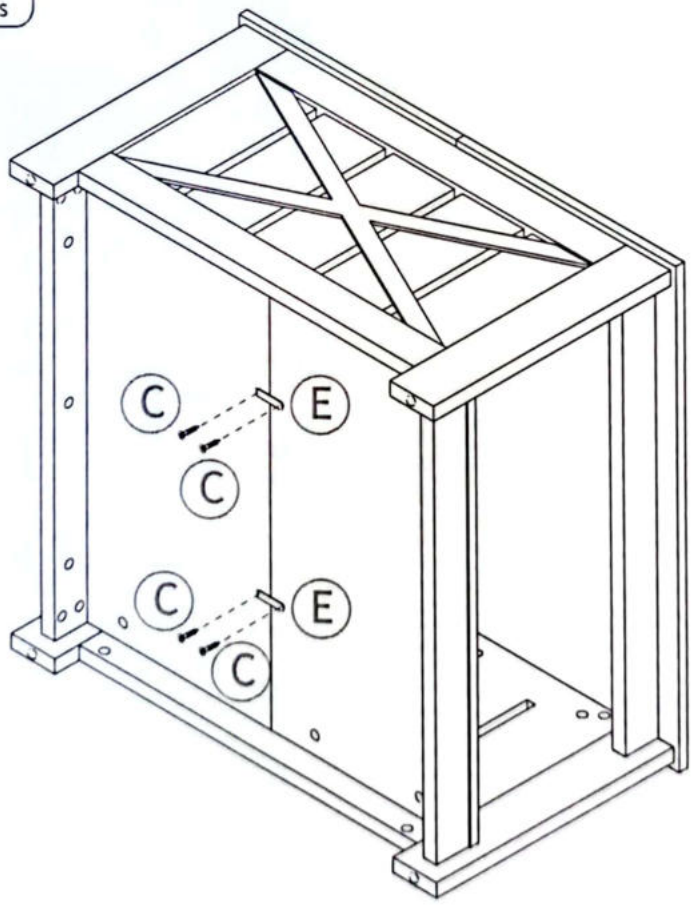


Сканировано с CamScanner

9

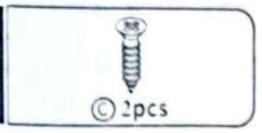

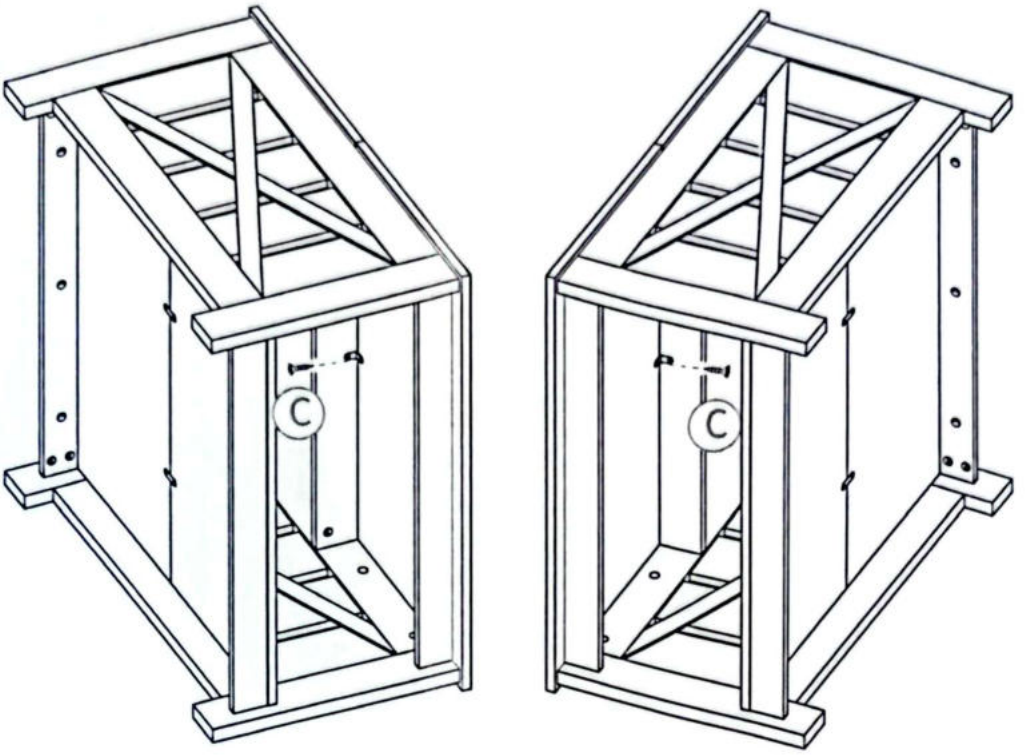

10

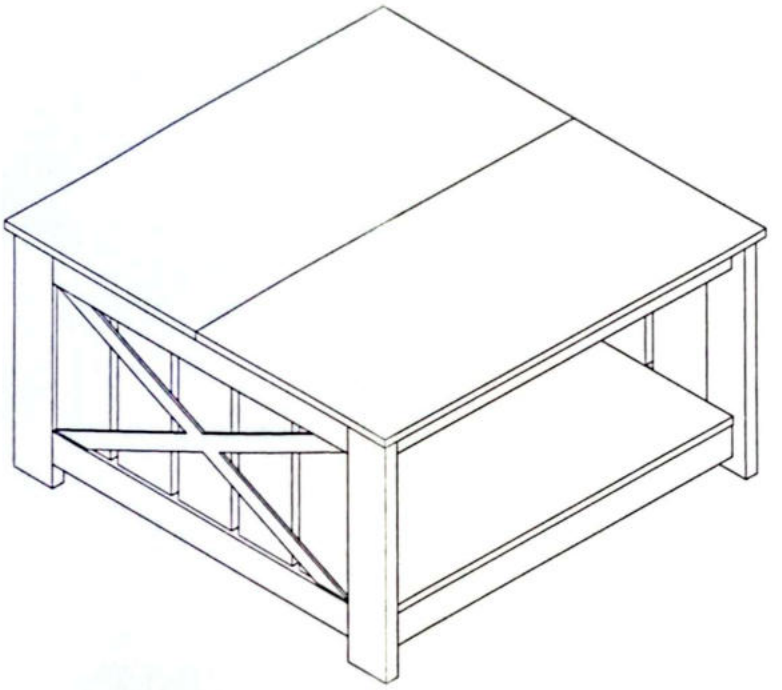

Installation Completed

Сканировано с CamScanner